



Always-On Case User Guide



Introduction

Thank you for purchasing a Classmate Always-On case from InfoCase®. The Classmate Always-On series is uniquely designed to provide your Chromebook or laptop with 24x7 protection and full machine functionality without ever needing to remove it from the case.

Features*



- 1) Carry Handle
- 2) Shoulder Strap D-Rings
- 3) ID Window
- 4) Pocket

- 5) Clear Screen Retention Straps
- 6) Case Velcro - Hook
- 7) Computer Velcro - Loop
- 8) Silicone Elastic Retention Straps
- 9) Anti-Skid Pad



* Size, quantity, or placement of features may differ slightly between your case and the case shown above.

Installing Your Laptop

1

Carefully place your computer upside down on a smooth surface. Remove any dirt or oils from the bottom of your computer using a clean cloth or alcohol wipe. Wait for the computer surface to dry. Remove the backing from the supplied piece of Velcro loop (#7) and place it on the bottom of the computer. It should be 1" -1.25" from the front edge of the computer and centered from left to right. Make certain not to cover any stickers, vent openings or access doors.

NOTE: The Velcro adhesive achieves full strength in 24 hours. It is recommended that you allow the Velcro to fully cure before placing your laptop in the Classmate case.

2

Next, to install the computer in your case, open your laptop and insert the computer screen under the clear screen retention straps (#5) as shown in the below image.



NOTE: Care should be taken not to put excessive tension on the clear screen retention straps. No other items should be placed behind the computer screen as these straps are designed to hold only the lid of the computer. Any misuse or abuse of the straps may cause damage to your computer and will void the case warranty.

3

Position the bottom of the computer on the base of the case to engage the Velcro. Next, gently pull the elastic retention straps (#8) over the front bottom corners of the laptop.



Once your computer has been fully seated inside the case, you are ready to zip the case closed for easy transport!

Tips for use

1. When closing the case, ALWAYS shutdown your computer to prevent accidental overheating.
2. When removing your laptop, ALWAYS remove the base of the computer first and then remove the screen from under the clear straps. Never pull the clear straps over the corners of the screen.
3. Always zip your Classmate Always-On case closed completely when your laptop is not in use. This will provide better protection against spills and drops.
4. The elastic retention straps can be moved off of the computer base to temporarily allow access to the side ports. For maximum protection, move only the strap necessary for port access and replace when access is no longer needed.

Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a two year limited warranty on defects and workmanship on your Classmate Always-On case. Please visit <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.