



Getac F110 G6 Always On Screen Cover User Guide



Introduction

Thank you for purchasing a Fieldmate® Always-On series case from InfoCase®. Your case will provide added full-time protection and increased productivity while using your Getac F110 G6.

Features




- 1) Hand Strap
- 2) Retention Straps
- 3) Easel Stand / Screen Cover
- 4) Closure Strap
- 5) Easel Holder
- 6) Stylus Holder
- 7) D-Rings
- 8) Shoulder Strap

Installation

1

Loosen the Hand Strap (1) and Retention Straps (2). Then slide the F110 G6 into the case at an angle. Push the device securely into the back corner of the case. Once the device is in place, feed the Hand Strap (1) and Retention Straps (2) through the appropriate webbing glides.

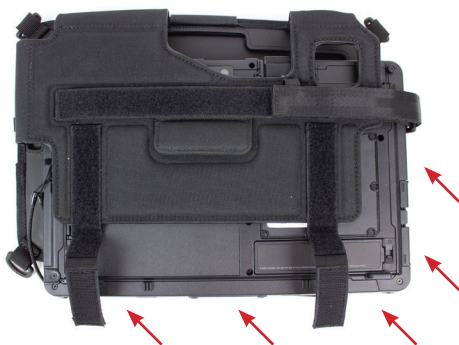

2

Note: Please ensure that the D-Rings (7) on the corner are not trapped between the device and the case. This may risk damage to the F110 G6 Device.



3

While gently but firmly holding the device in place, pull the Retention Straps (2) through the appropriate webbing glides. Pull the straps until the back of the case is tight against the device. Then press the tabs down to secure the Velcro for all three straps.



4

The screen cover can be used as an easel for viewing. To use, release the Screen Cover (3) from the Closure Strap (4), and fold the screen cover behind the case as shown into the Easel Holder (5).

Note: Please use the easel stand only in the position shown in the image.



5

The Always On style case can be carried using the included Shoulder Strap (8). Simply clip the strap to two of the D-Rings (7).

The Always On style case has openings for the most important buttons and ports. Care should be taken to protect the openings from rain or other liquids to avoid damage to your device.



Tips for Use

The Always On style case is designed to be used in a variety of ways to help with day to day work. It features easel functionality, a shoulder strap, screen cover and a hand strap as well. Please only use the hand strap as shown:

WARNING: Using the hand strap other than with your hand, as designed, may result in damage to your device. Any improper use of Fieldmate accessories will void your Fieldmate warranty, and may void your Getac device warranty, as well.

If you have any questions, or need clarification, please contact Getac, or marketing@infocase.com



To replace the batteries while the Always On case is installed, release the retention straps (2) and hand strap (1) and pull out the device from the case. There will be enough space to remove and replace the batteries. After replacing the batteries, connect the straps as shown in Steps 1, 2 and 3 in this guide.



Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.