

# Toughmate™

---

## TOUGHBOOK G2 Always On User Guide



### Introduction

---

Thank you for purchasing a Toughmate® Always-On series case from InfoCase®. Your case will provide added full-time protection and increased productivity while using your TOUGHBOOK G2.

## Features



- 1) Hand Strap
- 2) Velcro Strap
- 3) Retention Strap
- 4) Easel Stand
- 5) Stylus Holders
- 6) D-Rings
- 7) Shoulder Strap

## Installation

**1**

Loosen the Hand Strap (1), Velcro Strap (2) and Retention Strap (3) and then slide your TOUGHBOOK G2 into the case at an angle. Push the tablet securely into the back corner of the case. Once the tablet is in place, feed the Hand Strap (1), Velcro Strap (2) and Retention Strap (3) through the appropriate webbing glides.


**2**

While gently but firmly holding the G2 in place, pull the Velcro Strap (2) until the back of the case is tight against the G2. Then press the tab down to secure the Velcro.

3

To tighten the Retention Strap (3), feed the webbing through the webbing glide (a). Feed the webbing through the glide a second time as shown (b). Tighten the webbing and firmly, pull the glide upward, and then bring the webbing through the glide a third time (c) Finish by tightening the webbing through the glide (d).

Warning: For a secure connection to be created, the Webbing Straps must loop through the glide three times as shown (d).

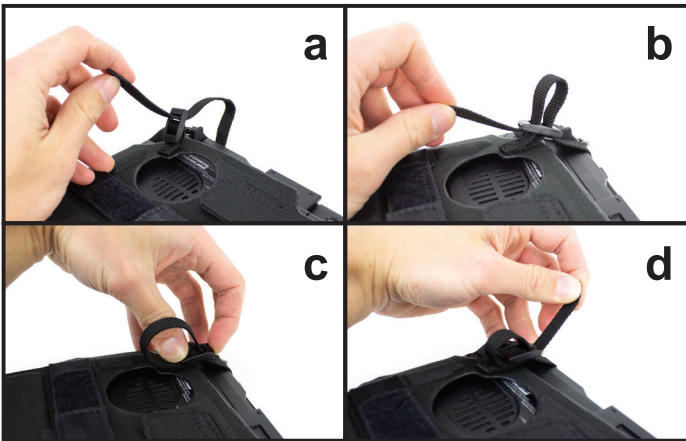

## Easel Stand

4

The screen cover can be used as an easel for both typing and viewing. To use either position, fold the screen cover behind the case and insert the front edge into the easel stand (4).



Typing Position



Viewing Position

## Tips for Use

The Always On style case is designed to be used in a variety of ways to help with day to day work. It features easel functionality, a shoulder strap, and a hand strap as well. Please only use the hand strap as shown:

**WARNING: Using the hand strap other than with your hand, as designed, may result in damage to your G2 device. Any improper use of Toughmate accessories will void your Toughmate warranty, and may void your Toughbook device warranty, as well.**



If you have any questions, or need clarification, please reach out to Panasonic, or to [marketing@infocase.com](mailto:marketing@infocase.com)



The Always On style case can be carried using the included Shoulder Strap (7). Simply clip the strap to two of the D-Rings (6).

The Always On style case has openings for the most important buttons and ports. Care should be taken to protect the openings from rain or other liquids to avoid damage to your TOUGHBOOK G2.

To replace the batteries while the Always On case is installed, release the straps (a) and loosen the hand strap (b). The user will have enough space to remove and replace the batteries (c). After replacing the batteries, connect the straps as shown in Steps 2 and 3.



## Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.