

Fieldmate™

Fieldmate Getac K120 Tablet ModuFlex User Guide



Introduction

The Moduflex style case is designed to be used with the Getac K120 in a variety of ways to help ease in transportation and increased productivity. Features include easel functionality, a shoulder strap, and a hand strap.

Features



Installation

Note: Before installation, please ensure that the Getac K120 device is laid face down on a soft surface.

1

Start by removing the adhesive covers off of the hook Velcro straps found on the back of the Moduflex. Once the adhesive is exposed on all three straps, carefully center the Moduflex onto the back of the K120, aligning the top retention straps (1) and the side retention straps (2) with the slot openings found on the device. Once in place, push down firmly on the Moduflex for the adhesive to attach to the K120 (**Warning: Do not press too hard, you may damage the K120**). Connection will be successful if the Moduflex can be removed and the hook Velcro remains on the K120 (as shown)



2

Once in place, feed the two top retention straps (1) into the top slots and the two side retention straps (2) into the side slots. Note: For use of optional accessories, add an O-Ring (7) onto each retention strap (1)(2).



3

Loop the Retention Straps (1)(2) back through the webbing glides. Tighten all four straps through the webbing glides to ensure an even and secure fit. To secure each retention strap, feed the straps through the webbing glides a second time and tighten each strap securely as shown below.



Tips for Use

The Moduflex style case includes a built in hand strap (5) which includes a stylus loop (6).



The included shoulder strap (8) can be attached to the top two O-Rings (7) and can be carried in landscape orientation. A user harness (sold separately) can also connect to all 4 O-rings (7).



To replace the batteries while the Moduflex case is installed, simply release the two quick connect clips (3), lift up the back of the Moduflex, and replace the batteries. After battery replacement, reconnect the Velcro and connect both quick connect clips (3).



To use the easel stand (4), simply unfold the easel stand from its holding strap. The edge stand will tuck into the back of the hand strap (5) as shown. To store the easel stand, simply hold the edge of the stand and fold the middle up into the holding strap (see images shown for details)



Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.