


## Getac ZX10 Always On User Guide

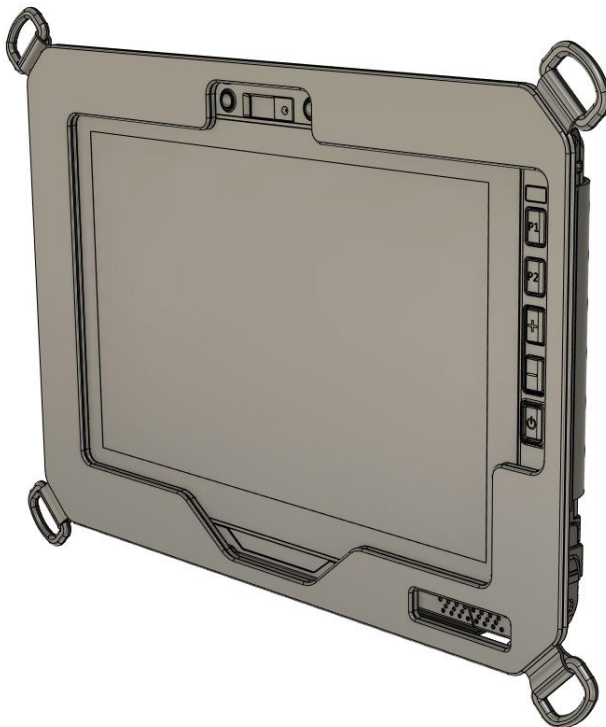


## Introduction

---

Thank you for purchasing a Fieldmate<sup>®</sup> Always-On series case from InfoCase<sup>®</sup>. Your case will provide added full-time protection and increased productivity while using your Getac ZX10.


## Features

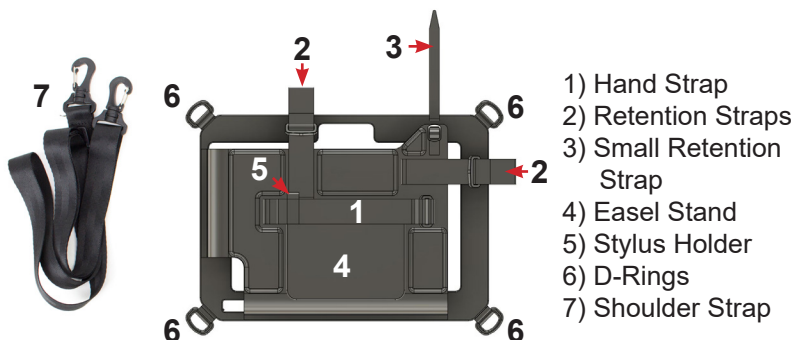

## Installation

**1**

Loosen the Retention Straps (2)(3). Then slide the Getac ZX10 into the case at an angle. Push the tablet securely into the back corner of the case. Once the tablet is in place, feed the Retention Straps (2)(3) through the appropriate webbing glides.

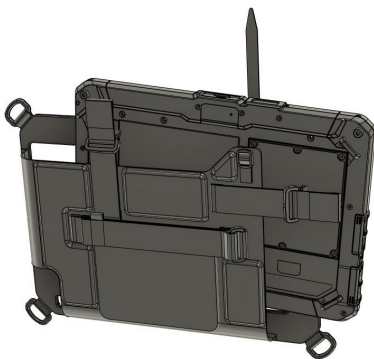
**2**

While gently but firmly holding the device in place, pull the Retention Straps (2) through the appropriate webbing glides. Pull the straps until the back of the case is tight against the device. Then press the tabs down to secure the Velcro for both straps.



**3**

To tighten the Small Retention Strap (3), feed the webbing through the webbing glide (a). Feed the webbing through the glide a second time as shown (b). Tighten the webbing and firmly, pull the glide upward, and then bring the webbing through the glide a third time (c) Finish by tightening the webbing through the glide (d). Warning: For a secure connection to be created, the Webbing Straps must loop through the glide three times as shown (d).

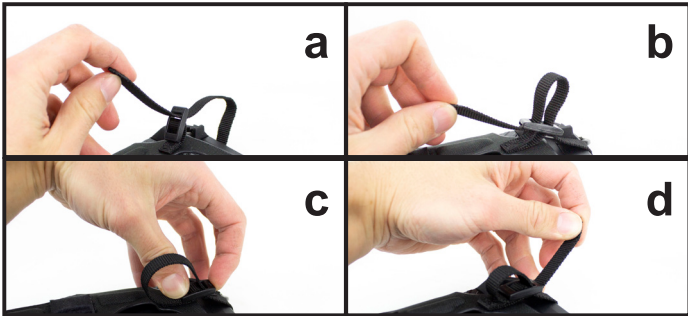

**4**

The Easel Stand (4) can be pulled outward and used on a flat sturdy surface at the viewing angle as shown in the image. The easel can be folded away by pressing the easel against the inner Velcro.



**5**

The Always On style case can be carried using the included Shoulder Strap (7). Simply clip the strap to two of the D-Rings (6).

The Always On style case has openings for the most important buttons and ports. Care should be taken to protect the openings from rain or other liquids to avoid damage to your device.




## Tips for Use

The Always On style case is designed to be used in a variety of ways to help with day to day work. It features easel functionality, a shoulder strap, and a hand strap as well. Please only use the hand strap with hands only.

**WARNING: Using the hand strap other than with your hand, as designed, may result in damage to your device. Any improper use of Fieldmate accessories will void your warranty.**

If you have any questions, or need clarification, please contact [marketing@infocase.com](mailto:marketing@infocase.com)

To replace the batteries while the Always On case is installed, release the Retention Straps (2)(3) and pull out the device from the case. The user will have enough space to remove and replace the batteries. After replacing the batteries, connect the straps as shown in Steps 1, 2 and 3 in this guide.

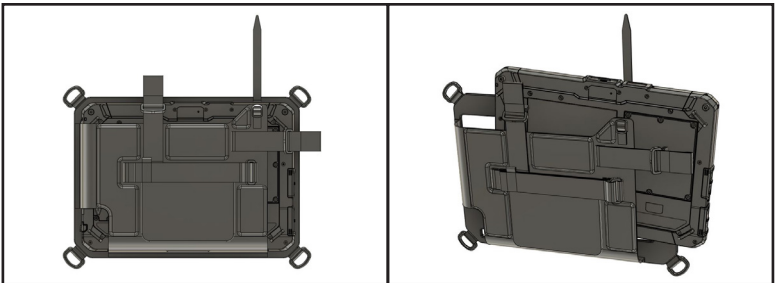

## Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.