

InfoCase DuraStrap X




Introduction

Your InfoCase DursStrap X is uniquely designed to provide ease in transportation and utilization of your device and all of its added features.

FM-DURA-XM 1



Features

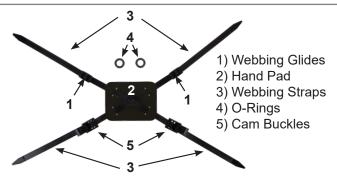



Before installation, make sure your device is laid face down on a soft, clean, surface. Align the Webbing Straps (3) to the slots so that they will feed through evenly, with the webbing glides (1) orientated to the top of the device. (Pictured to left)

To install the Webbing Straps (3), insert the end of the strap into one of the slots that are built into the device. Push the strap through and when the end emerges from the other side of the slot, pull the strap through. Note: Webbing edges may need to be curled to help feed webbing through the slots.



3



Follow Step 2 for all four slots. Ensure that the Hand Pad (2) is centered properly on the device.



Note: For optional shoulder strap attachment, choose two different webbing straps (3) and feed an O-ring (4) onto each strap before Step 4. After adding O-rings, follow Steps 4 and 5 for a secure connection. The shoulder strap can now be connected to the O-rings after Step 5 is complete.



Loop the Webbing Strap (3) back through the front and back of the Webbing Glide (1). For a secure connection, it **must** be looped through a third time. For easy installation, pull the Webbing Glide (1) upward and feed the strap through the opening.







On the bottom side of the device, feed the two Webbing Straps (3) through the Cam Buckle (5). Once the desired tension is met, close the Cam Buckle (5) by pushing the lever down. (Shown below) If installing or uninstalling extended battery or alternative peripheral, simply undo Cam Buckle (5), slide out Webbing Straps (3) to loosen X-Strap.



Caution: Be sure the buckle is not too close to the corner of the device to avoid interference with docking cradles. The buckles must also be oriented as shown above to keep them from disengaging.

Tips for use

- The DuraStrap X can be disinfected up to the same levels of a fully ruggedized device.
- When installing or uninstalling extended battery or alternative peripheral, simply undo Cam Buckle, slide out Webbing Straps to loosen X-Strap.

Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: http://www.InfoCase.com/warranty or call 1-800-248-4844 to obtain more information on the InfoCase warranty.