


Fieldmate Arm Mount Cradle for Zebra TC5X User Guide



Introduction

The arm mount cradle for the Zebra TC5X is designed to help increase productivity and help with the ease of use. With adjustable straps, the TC5X device can comfortably fit on most arms and always in reach.

Features

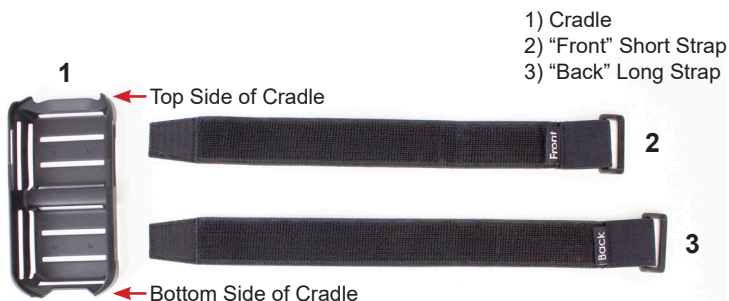

Installation

1

Start by placing the (1) Cradle face down. Both the (2) "Front" Short Strap and (3) "Back" Long Strap will be placed Velcro side down as shown in the image. As seen in "Features", ensure that the (2) "Front" Short Strap will feed through the slots near the top side of the cradle while the (3) "Back" Long Strap will feed through the slots near the bottom side of the cradle.



2

Feed the straps through the bottom slots. Once the label tags are though the bottom slots, feed the strap back up through the top slots as shown in the image. Note: Before proceeding, ensure that the strap tags are in the slot, within the cradle as shown in the image.



3

The straps will now feed through the slots on opposite side of the cradle. Feed the straps into the top slots until the strap sits flat against the cradle. Next, feed the strap through the bottom slots as shown in the image.



4

Feed the ends of the straps back through their corresponding glide loop. Press the hook Velcro against the loop Velcro. The TC5X device is now ready for installation.



5

Place the TC5X at an angle inside the cradle as shown below. Ensure that the device is properly oriented top and bottom. (The side buttons will line up with the openings on the cradle.) Gently press the device downward into the cradle. The cradle will snap into place around the TC5X.



Tips for Use

The arm mount cradle is designed to fit most arm sizes comfortably. While the device is face down on a flat stable surface, slide a hand through the strap loops until the straps and device are located on the desired location on the arm. Tighten each strap so that it fits snugly and firmly against the arm.

WARNING: Do not overtighten the straps, which may lead to a risk of physical discomfort or injury.

If straps are too tight, using less slot openings can provide more slack for the straps.



While Landscape orientation is shown throughout this User Guide, a strap can also be fed through the horizontal slots in the (1) Cradle as shown. This will allow for the TC5X to be displayed in Portrait orientation. Follow the same installation steps 1-5, but use the horizontal slots in the cradle. The user may try different slot spacing or use either the (2) "Front" Short Strap or the (3) "Back" Long Strap until they have achieved optimum comfort and fit around their arm.



Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.