

## Fieldmate Expansion Back Hand Strap for Zebra ET4X (10 inch / 8 inch) User Guide



### Introduction

---

The Expansion Back Hand Strap is designed to be used with the Zebra ET4X to provide a slim, low profile hand strap that connects directly to the device. Velcro adjustment allows for the hand strap to fit most hand sizes comfortably.

---

---

## Features

---

1) Hand Strap



2) Back Cover



---

## Installation

---

**Note:** Before installation, please ensure that the Zebra ET4X device is laid face down on a soft surface.

**Note:** Installation shown with ET4X 10 inch Tablet. Installation of the 8 inch tablet will follow the same instructions for the 10 inch tablet.

---


1

Start by removing the back battery cover on the back of the Zebra ET4X device. **Note:** Please refer to the Zebra ET4X User Manual for instructions on how to properly remove the battery cover from the back of the device.




2

Once the Zebra battery cover is removed, position the (2) back cover so that the tabs match up with the openings for the battery cover as shown in the image. Once in place, the (2) back cover will hinge downward and match with the clip openings on the back of the device.

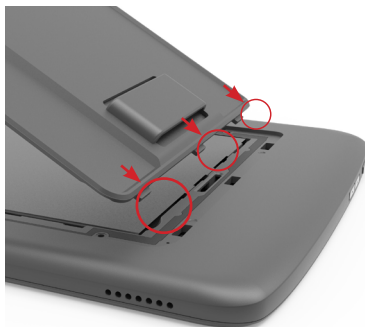


**3**

**WARNING:** While installing the (2) back cover onto the Zebra ET4X device, ensure that the clips line up with the openings. Carefully push downward onto the (2) back cover. The clips will each snap into the openings on the device and hold securely. Pushing too hard in the wrong location may risk breaking the Expansion Back Hand Strap and the Zebra ET4X device (which may void your warranty.) Once the (2) back cover is flush and parallel with the device, the (2) back cover is properly installed.

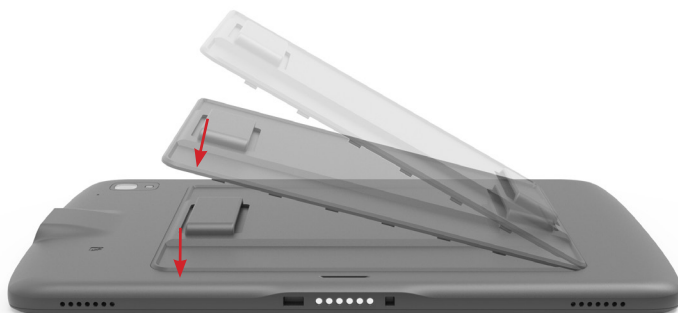**4**

With the (2) back cover installed, take the (1) hand strap and feed the hook Velcro tab through both strap slots on the (2) back cover. Ensure that the hook and loop Velcro are facing down toward the device while feed the strap through the slots.

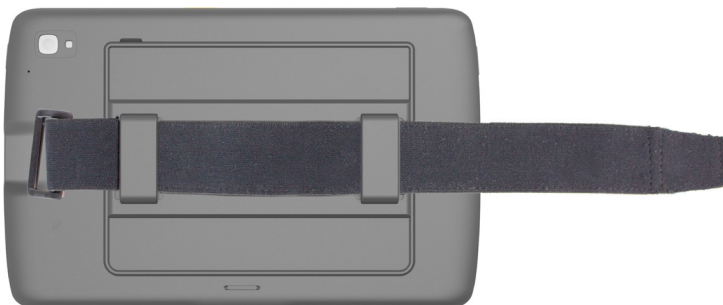


---

---

**5**

Fold the hook Velcro tab back over toward the rectangle glide on the opposite side of the strap. Feed the Velcro tab through the glide as shown below. Finish installation by folding the hook Velcro onto the loop Velcro.

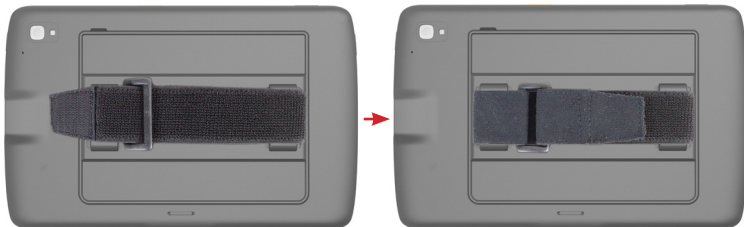

## Tips for Use

---

The elasticity and Velcro allow for the hand strap to be adjusted to fit the user's hand size. Simply pull the hook Velcro off the loop Velcro and readjust to the user's preferred size. The user can also place their hand under one or both straps on the hand strap for more fit options.



---

---

## Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.