



InfoCase Mobility Bundle for Tablets User Guide



Introduction

Thank you for purchasing an InfoCase Mobility Bundle for tablets. Your Mobility Bundle is uniquely designed to provide ease in transportation for your tablet device.

Features



- 1) Acetal O-Rings
- 2) Ergonomic Handle
- 3) Quick Connect Clips
- 4) Shoulder Strap
- 5) Spring Clip

Before installation, make sure that your device is laid face down on a soft surface.


Please be aware that this user guide will demonstrate installation with the Panasonic S1 device. This InfoCase Mobility Bundle is approve for many tablets, so installation on the device will be similar to what is shown in this guide.

1



Before installation, please ensure that both the quick connect clips (3) are disconnected.

2

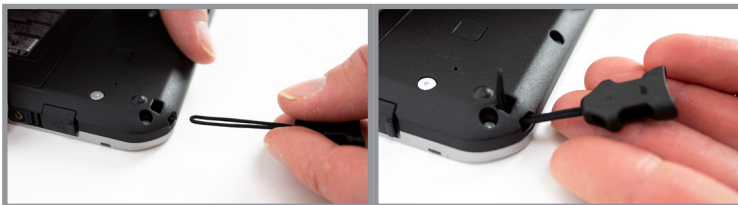

Find an approved opening on the device or case, and feed the cord of the quick connect clip (3) into the chosen slot.

3



With the cord through the slot, loop the cord back around the plastic buckle on the quick connect clip (3). Pull on the buckle to tighten the quick connect clip (3) to the device.

4

Repeat Steps 2 and 3 for the second slot.

5



With the two quick connect clips (3) installed, the Ergonomic Handle (2) is ready to be installed.

6



To install, connect both of the quick connect clips (3) with the plastic buckles. Your mobility bundle is now installed.

Additional Information

1. **Please ensure that the mobility bundle is installed using approved slot openings. Improper installation may result in damage to the device, dock and/or mobility bundle, as well as failure to charge the device via a vehicle dock or cradle. Please read the user guides for the device or case for more details on approved slot openings.**
2. The included Shoulder Strap (4) is adjustable via a Webbing Glide located near the end of the strap. The Shoulder Strap is also removable via Spring Clips (5) and Acetal O-Rings (1).
3. The Mobility Bundle is designed to be small and out of the way so it can remain on your device at all times.



Warranty

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a warranty on defects and workmanship on this product. Please visit: <http://www.InfoCase.com/warranty> or call 1-800-248-4844 to obtain more information on the InfoCase warranty.