

# **Mini User Harness for Tablet uniVERSE**

## **Case User Guide**




## **Introduction**

---

Thank you for your purchase of this unique InfoCase accessory! The Mini User Harness Kit is designed exclusively for the OtterBox uniVERSE tablet cases to provide improved efficiency and optimal workflow.

## Features

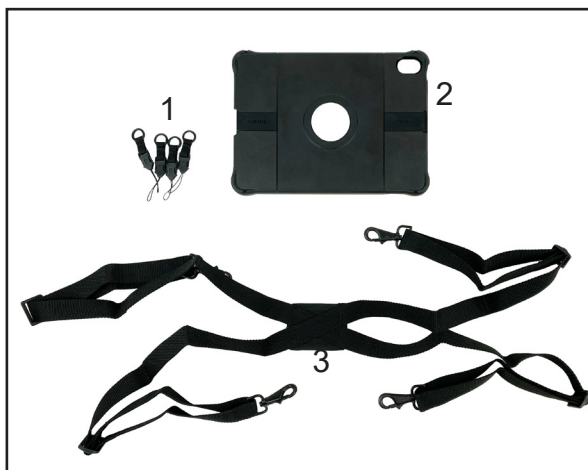

1. Retention Clips
2. uniVERSE Tablet Case
3. 4 Point Harness

## Installation

1



Undo quick connect clip (1) and insert cord through slot of the case (3).

2



Pull cord over the clip (3), then pull clip through.

3



Repeat for the remaining 3 corners of the case (3).

4



Attach 4 point harness (3) to the O-rings on the clips (1).

## Tips for Use

---

- The strap length can be adjusted using the tri-glides.



## Warranty

---

InfoCase products are dynamic, consistently improved and reinvented to bring you the best products on the market. We use only the highest quality materials to meet your mobile technology demands.

InfoCase offers a 1 year warranty on defects and workmanship on this InfoCase product. Please visit: <http://www.InfoCase.com/warranty> to obtain more information on the InfoCase warranty.